




# PEUGEOT 206

# 9682.K9



FAISCEAUX POUR PROJECTEURS -	6204.S9 / 6205.S9
HARNESSES FOR HEADLAMPS -	6204.S9 / 6205.S9
KABELSÄTZE VOR HAUPTSCHEINWERFERN -	6204.S9 / 6205.S9
HAZ PARA PROYECTORES -	6204.S9 / 6205.S9
CABLAGGI PER PROIETTORI -	6204.S9 / 6205.S9
SUPORTES PARA PROJECTORES -	6204.S9 / 6205.S9
BEDRADING VOOR KOPLAMPEN -	6204.S9 / 6205.S9

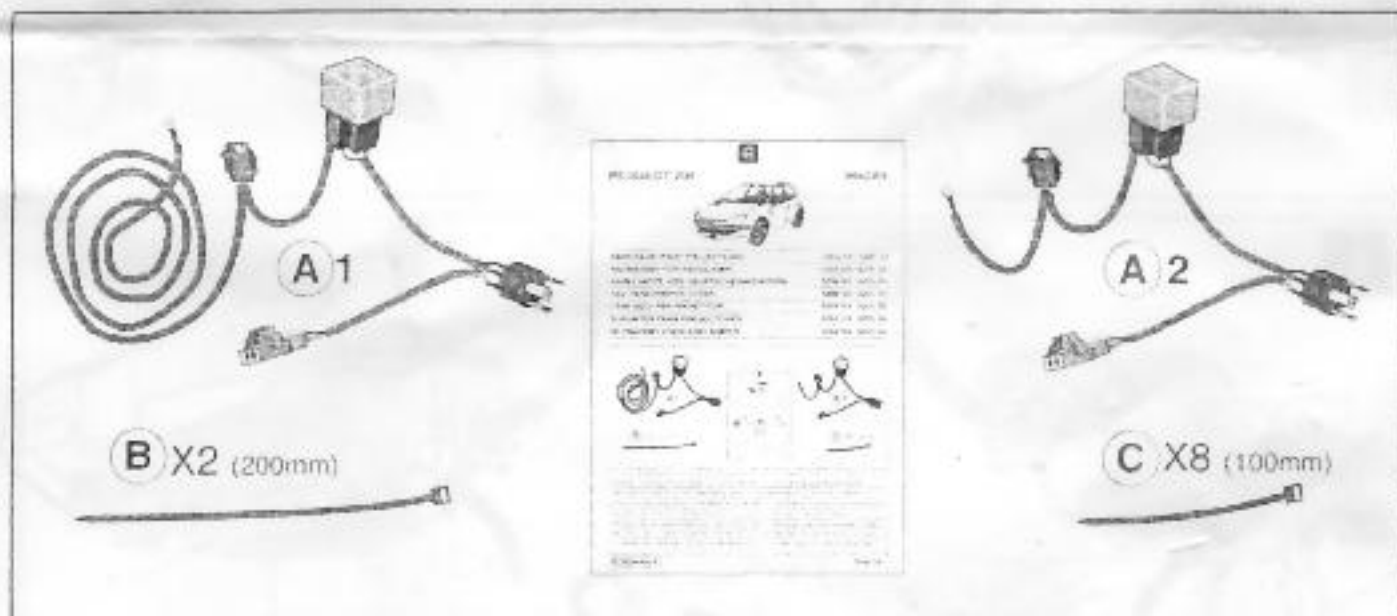

**IMPERATIF:** Le kit FAISCEAUX POUR PROJECTEURS 6204.S9 / 6205.S9 - Ref PR 9682.K9 doit être monté par un professionnel.

**IMPERATIVE:** The HARNESSES for HEADLAMPS 6204.S9 / 6205.S9 kit - Part Number 9682.K9 must be fitted by a professional.



**WICHTIG:** Der KABELSÄTZE VOR HAUPTSCHEINWERFERN 6204.S9 / 6205.S9 - ET-Nr 9682.K9 muß von einem Fachmann montiert werden.

**IMPERATIVO:** El HAZ PARA PROYECTORES 6204.S9 / 6205.S9 - referencia P.R. 9682.K9 debe montarlo un profesional.

**IMPERATIVO:** Il kit CABLAGGI PER PROIETTORI 6204.S9 / 6205.S9 - riferimento P.R. 9682.K9 deve essere montato da un tecnico di officina.


**IMPERATIVO:** O kit DE SUPORTES PARA PROJECTORES 6204.S9 / 6205.S9 - Ref. Peça 9682.K9 deve ser montado por um profissional.




**VOORSCHRIFT:** De set BEDRADING VOOR KOPLAMPEN 6205.S9 / 6205.S9 - ond. nr. 9682.K9 moet door de dealer worden gemonteerd.

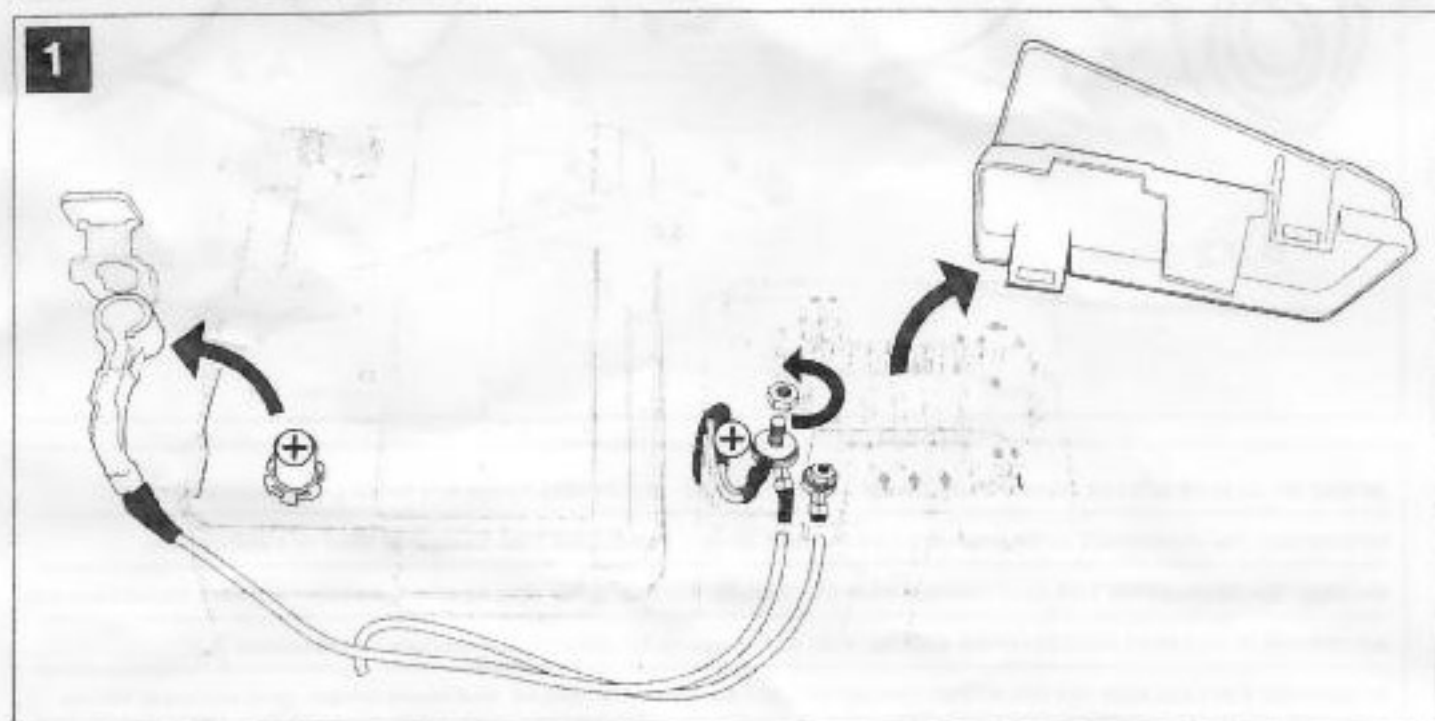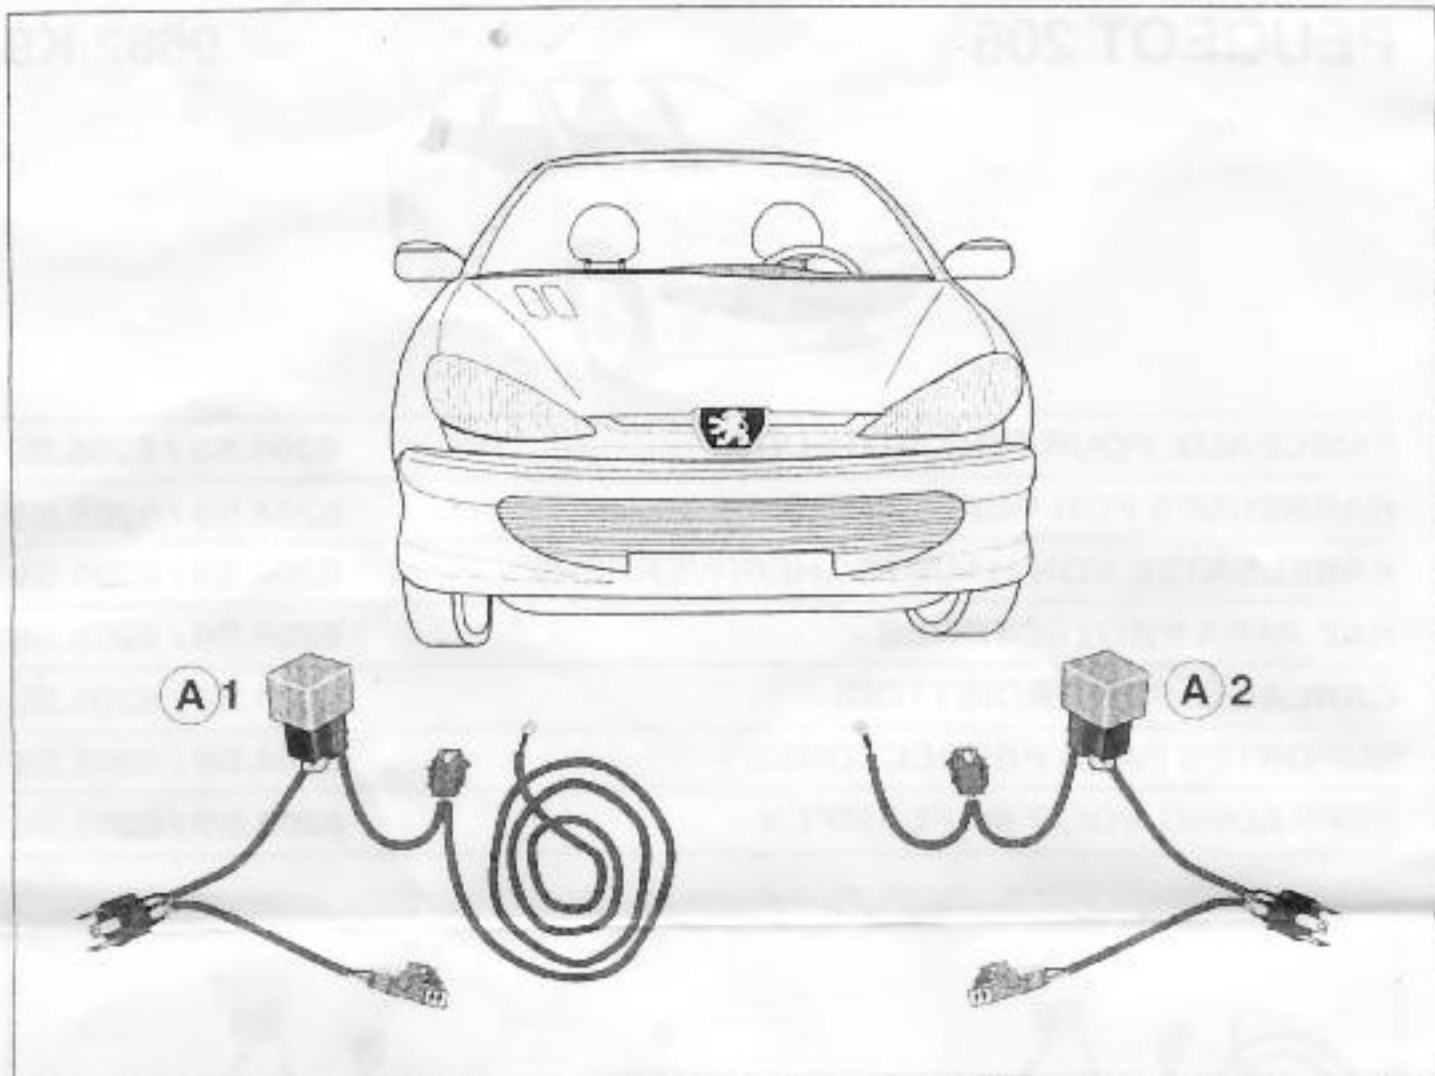




2

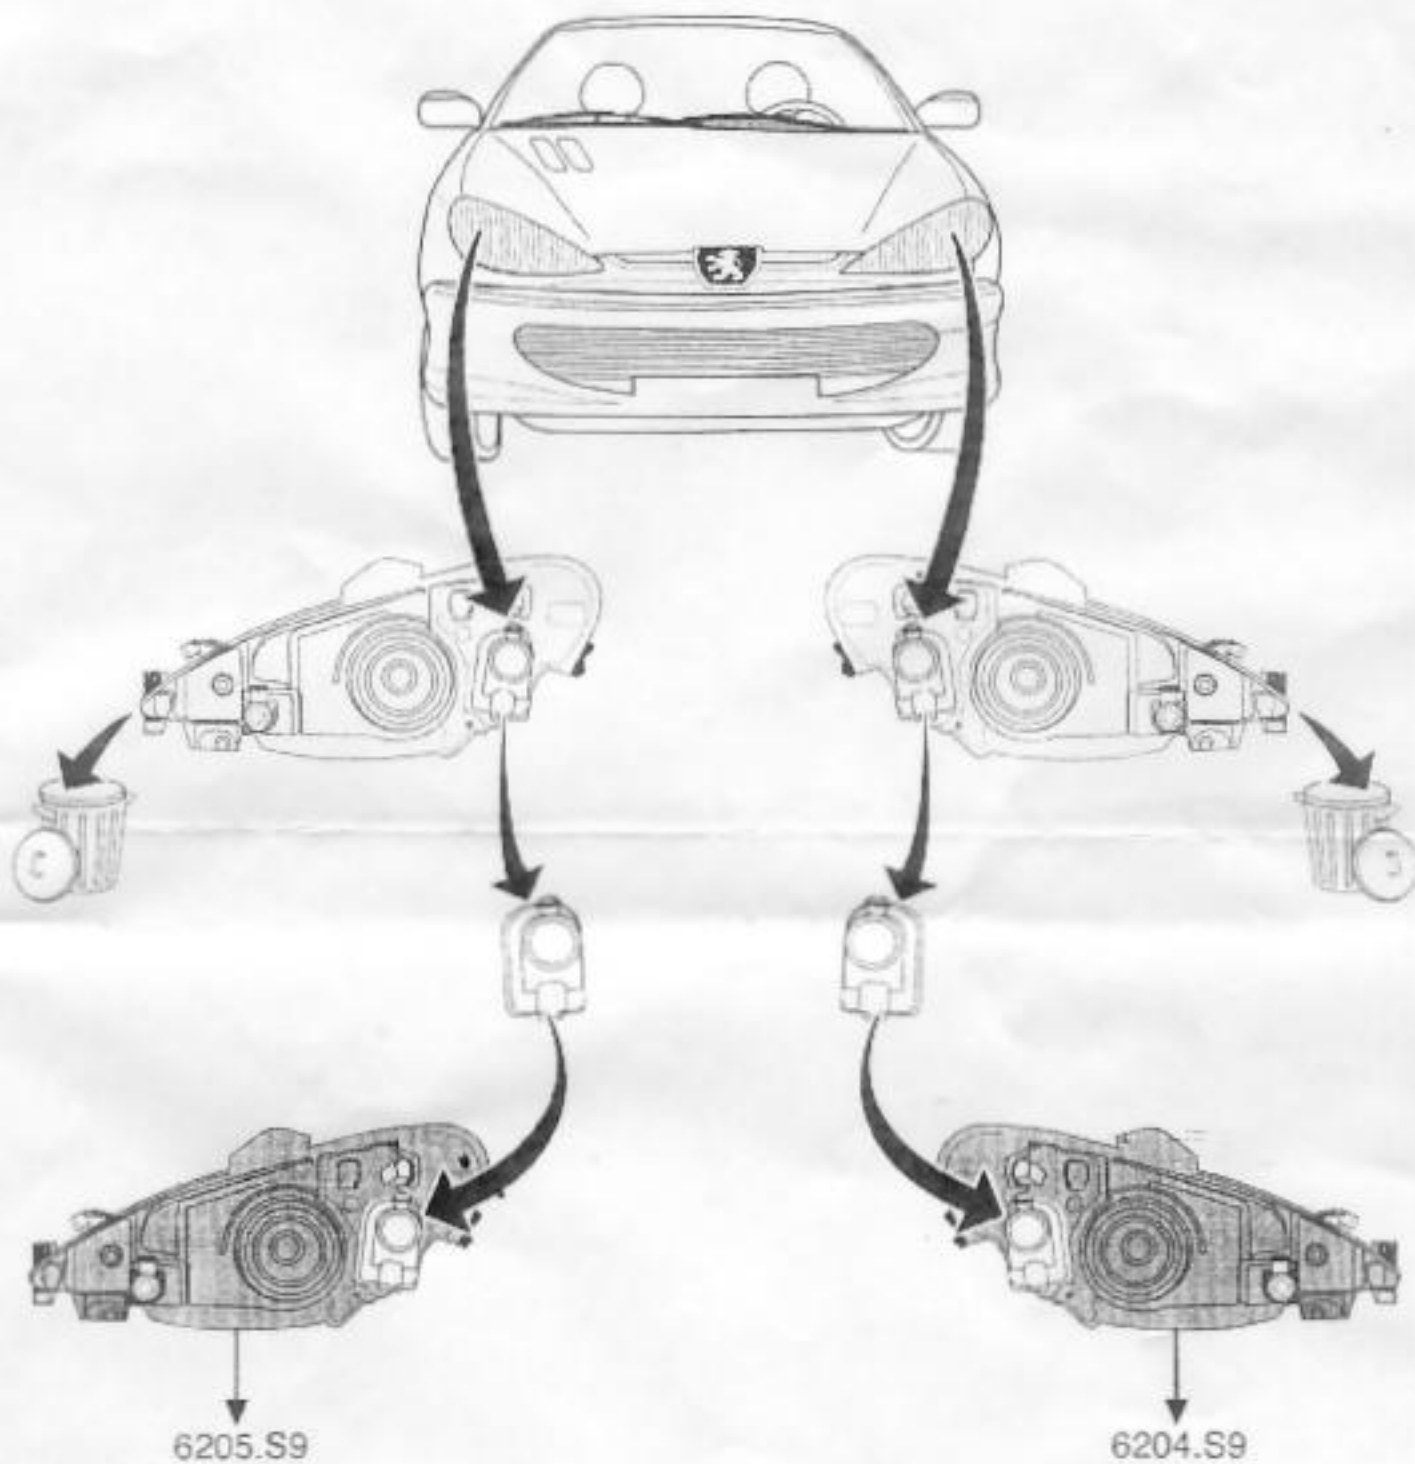

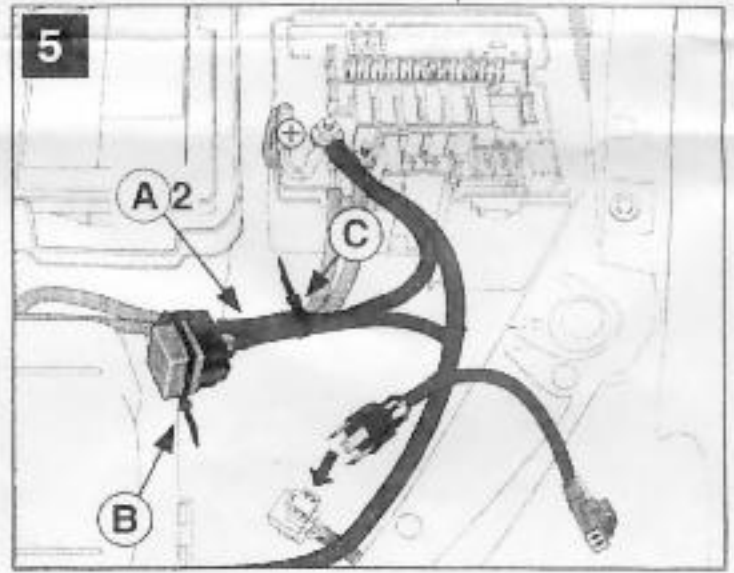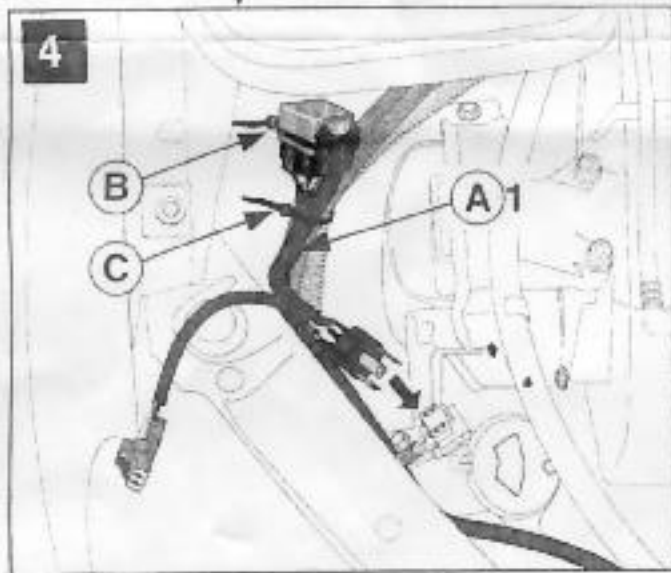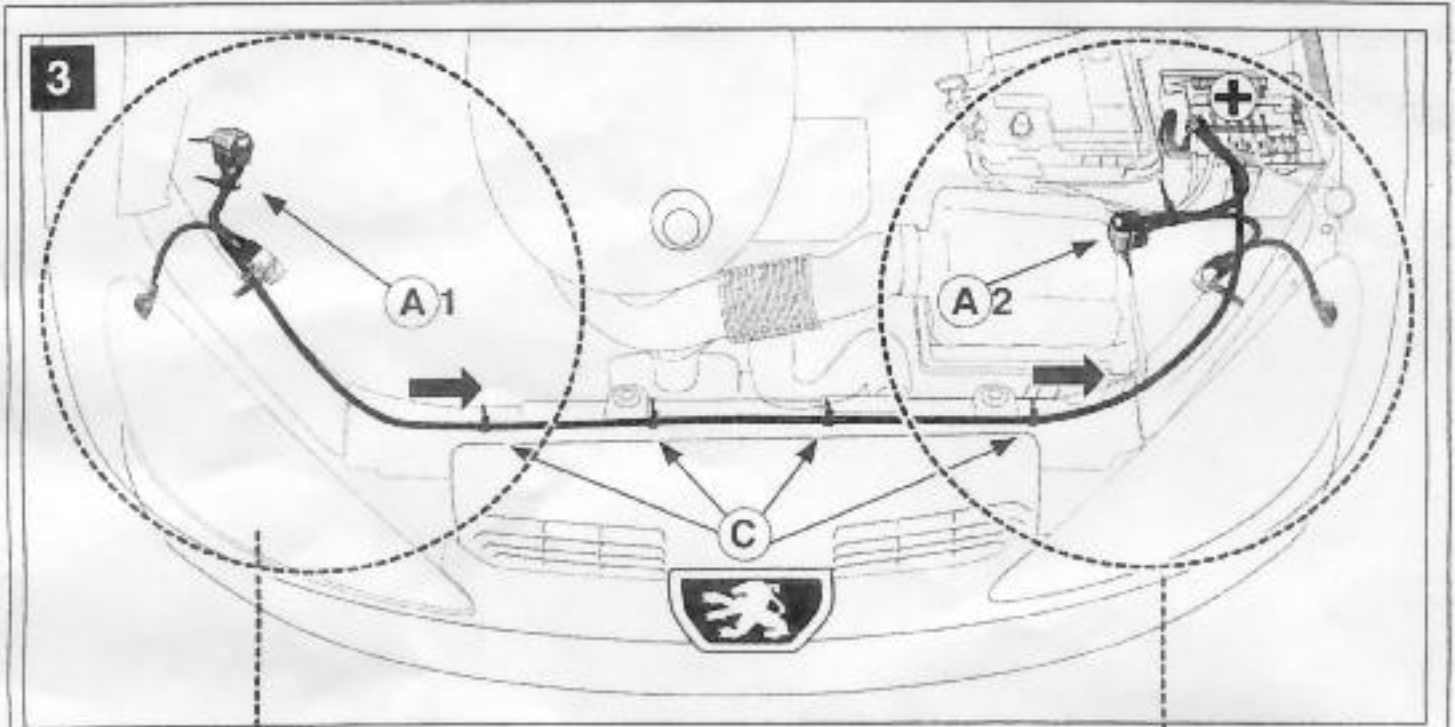



6

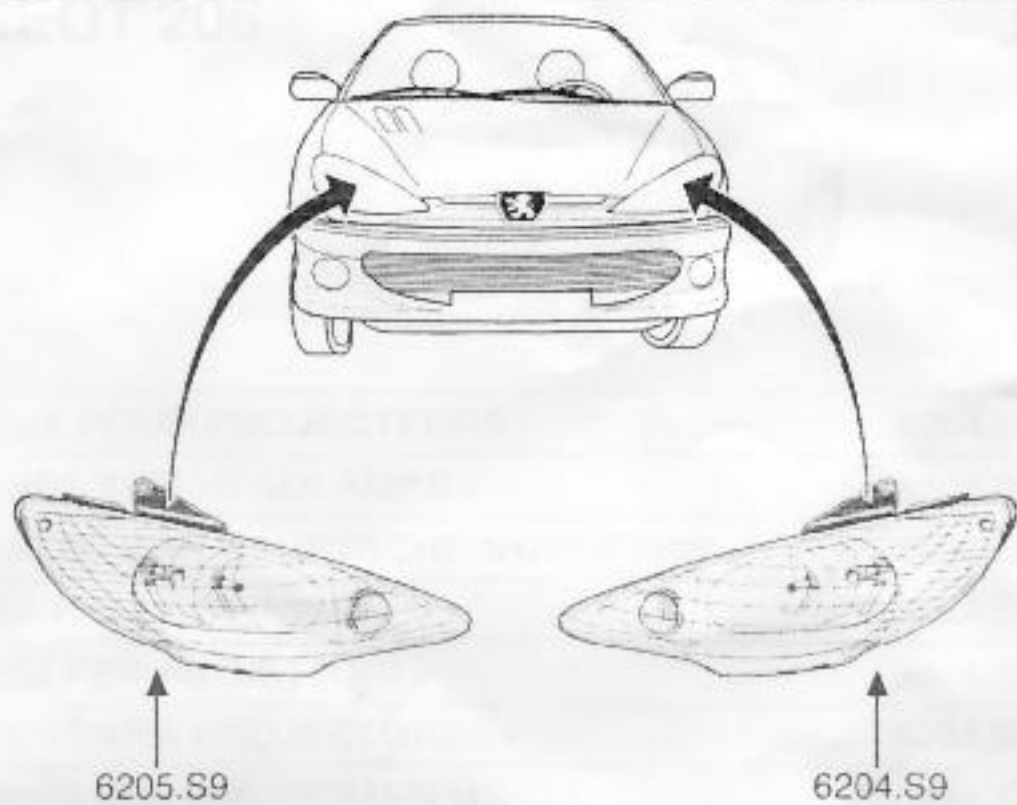

7

